

## Sidepost Classic Umbrella

### Opening and Closing Instructions

#### TO OPEN

1. Remove the securing strap.
2. Gently pull the rope (the canopy may require some assistance from the fully closed position).
3. Open the canopy until the fabric is taut.
4. Securely fasten the rope onto the cleat on the main pole.
5. Neatly roll up the rope and put it into the purse.

#### TO CLOSE

1. Untie the rope from the rope-cleat.
2. Release the rope allowing the canopy to close quickly with a “Woosh motion” causing the air to push the fabric out and clear of the arms.
3. When fully collapsed, pull the fabric from between ALL arms.

**NOTE: MAKE SURE THERE IS NO FABRIC CAUGHT BETWEEN OR BEHIND THE ARMS. IF ALL FABRIC IS NOT CLEAR, DAMAGE TO THE CANOPY MAY OCCUR! ANY SUCH DAMAGE IS NOT COVERED BY OUR WARRANTY.**

4. Wrap or furl the fabric panels around the umbrella in the same way you would a hand held umbrella.
5. YOU MUST SECURE THE FABRIC PANELS WITH THE STRAP PROVIDED!

**NOTE: FAILURE TO SECURE WITH THE STRAP MAY RESULT IN DAMAGE TO THE CANOPY. ANY SUCH DAMAGE IS NOT COVERED BY OUR WARRANTY.**

*WRAP OR FURL THE FABRIC AROUND THE UMBRELLA ENSURING THAT ALL FABRIC IS REMOVED FROM BEHIND THE ARMS. THIS MUST HAPPEN EVERY TIME THE UMBRELLA IS COLLAPSED IN ORDER TO AVOID DAMAGE. ALWAYS SECURE WITH THE STRAP PROVIDED.*

**\*\*\*WARNING!!! WARNING!!! WARNING!!!\*\*\***

This umbrella is **NOT DESIGNED** to withstand strong winds. Umbrella should be closed when not in use and not used in windy conditions.

Use the umbrella as instructed and you will enjoy many years of excellent service from this premium quality Australian made umbrella.

#### TO REMOVE THE CANOPY FROM THE MAIN FRAME

1. Close the canopy as per instructions.
2. Unhook the pulley from the main pole hook.
3. Lift the canopy approximately 30mm vertically, then rotate 180°.
4. Canopy can now be lowered or removed from the main frame for storage.

