

CAFE & COURTYARD

CARE & MAINTENANCE



Congratulations on the purchase of a Commercial Umbrella. If treated in accordance with the recommended care and maintenance instructions listed below the umbrellas will give you years of trouble free service. We are pleased to offer a five year warranty on frame and fabric on all Commercial Umbrellas installed to the manufacturers specifications and maintained as outlined below.

You will find your umbrella's individual identifying number on the stainless steel disc where the wind up handle locks in.

CARE AND MAINTENANCE OF THE UMBRELLA FRAME

The warranty offered does not account for degradation of synthetic materials over time, nor for modifications or lack of maintenance that may result in reduced strength over time. It does not cover mistreatment of umbrella, in particular leaving standing in high winds or damage caused during removal and replacement of umbrella.

The wind rating refers to the 'safe break down' wind speed.

Square Size	Open Km/h	Closed Km/h	Octagonal Size	Open Km/h	Closed Km/h
3.0m	>200	>200	3.5m	>200	>200
3.6m	>200	>200	4.0m	>200	>200
4.0m	192	>200	4.5m	>200	>200
4.5m	172	>200	5.0m	>200	>200
4.8m	143	>200	5.5m	183	>200

UMBRELLA SPECIFICATIONS

Pole Diameter:	82.5mm x 5.2mm
Arms Section:	25.0mm x 50.0mm x 3mm
Handle Height:	650mm for 3.0m Square
Mechanism:	Rack and Pinion Gearbox
Material:	Structural Grade Aluminium
Finish:	Powder Coated
Canopy:	Outdoor Acrylic or PVC

HANDLING OF UMBRELLAS

When removing umbrellas do not lie them down or stack them one on the other. Do not scuff, scratch or mark the powdercoated frame or fabric.

TO OPEN UMBRELLA

1. Gently push arms out from the pole. Umbrella should unfold most of the way by itself.
2. Bolt the handle to the round stainless steel axle and wind up.
3. Open the umbrella until the canopy is taut.
4. Secure by placing the locking pin into the round stainless steel axle.
5. The handle may be removed if required.
6. PLEASE ENSURE THAT THERE IS NO LOOSENESS IN THE CANOPY AS IT CAN BECOME DAMAGED IF THE CANOPY IS NOT TAUT.

CAFE & COURTYARD

CARE & MAINTENANCE



TO CLOSE UMBRELLA

1. Attach the handle to the round stainless steel axle.
2. Release pressure on the locking pin.
3. Remove the locking pin.
4. Wind the umbrella down.
5. Ensure all the canopy material is not jammed between;
 - a) The arm and arm bracket
 - b) The arms and the main pole

Note: Make sure there is no fabric jammed between the arms. If all fabric is not clear, damage to the canopy may occur. Any such damage is NOT covered by our warranty.

6. Wrap all the canopy material around the umbrella in the same way you would for a rain umbrella.
7. Secure with the strap supplied.

Note: You must secure the panels with the strap provided. Failure to secure with the strap may result in damage to the canopy. Any such damage is NOT covered by our warranty.

CARE OF 100% ACRYLIC OUTDOOR FABRIC

When used in permanent outdoor situations 100% Acrylic Outdoor Fabric should be hosed regularly to remove dust, bird droppings, tree sap and other solid particles.

To ensure the water repellence is fully retained after continuous outdoor exposure the fabric should be treated with a water repellent compound every 12 months. Professional services are available for this re-treatment work.

Waterborne stains such as coffee, tea, red wines, etc should be treated first by rinsing in cold water. If this is not sufficient the fabric may be washed with a mild solution of soap in lukewarm water (max. temperature 38 degrees C, 100 degrees F) and rinsed thoroughly.

Stubborn soiling may require treatment with a hypochlorite bleach such as White King. The fabric should be soaked for 20 minutes in a solution of one part White King to four parts of warm water (max. temperature 38 degrees C, 100 degrees F). Apply the diluted solution to the fabric with a soft brush and rinse off thoroughly after 15 minutes. Follow the safety directions outlined on the White King container.

As part of the water repellent finish may be removed after a bleach application or solvent, the fabric should be treated with a water repellent compound.

As the fabric is made from 100% acrylic fibre it is heat sensitive. Therefore when washing or cleaning;

DO NOT wring, spin or press dry, as permanent creases may be set in the fabric.

DO NOT dry in an electric or gas dryer.

ALLOW TO AIR DRY.

ENJOY!

FOR FURTHER INFORMATION CONTACT US



Shade Australia Pty Ltd

A: 91 Stanley Road Ingleburn NSW 2565

E: info@shadeaustralia.com.au

P: 1800 155 233 or 02 9605 5560

W: shadeaustralia.com.au

