

INGROUND BASE INSTALLATION

Inground bases are supplied in two parts:

1. Top half called "The Spigot"
2. Bottom half called "The Socket"

Bolt the two parts together using the bolts supplied.

Dig a hole for the concrete measuring approx. 400mm dia x 600mm deep.


Flanged half of the base should be concreted at ground level.

Base must be levelled so that spigot is EXACTLY vertical.

Concrete must be left to stand for approx. 1 week before standing the umbrella.

Installation instruction and care and maintenance instructions come with your new umbrella.

IN GROUND BASE SECTION VIEW

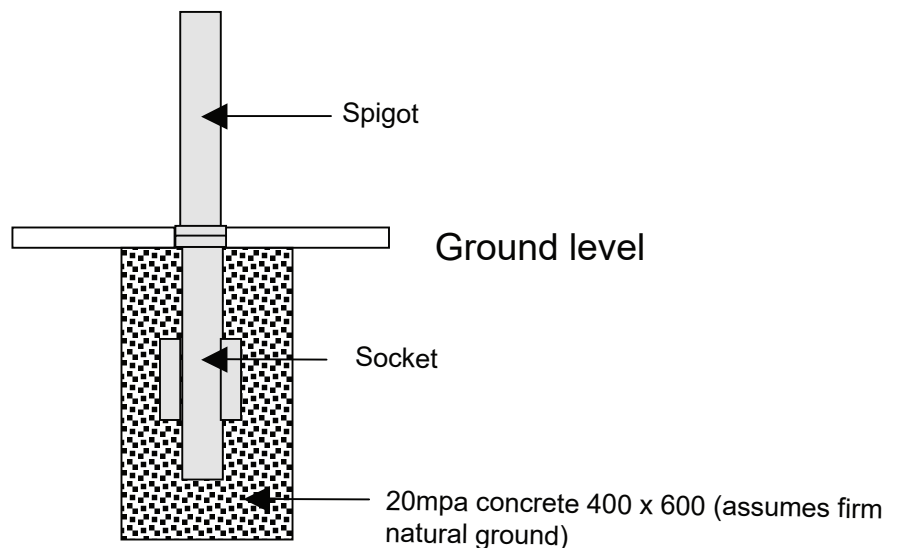

FOR FURTHER INFORMATION CONTACT US



Shade Australia Pty Ltd

A: 91 Stanley Road Ingleburn NSW 2565

E: info@shadeaustralia.com.au

P: 1800 155 233 or 02 9605 5560

W: shadeaustralia.com.au

