


Layout Guide for a 6.8 metre Equilateral Triangular Shadesail

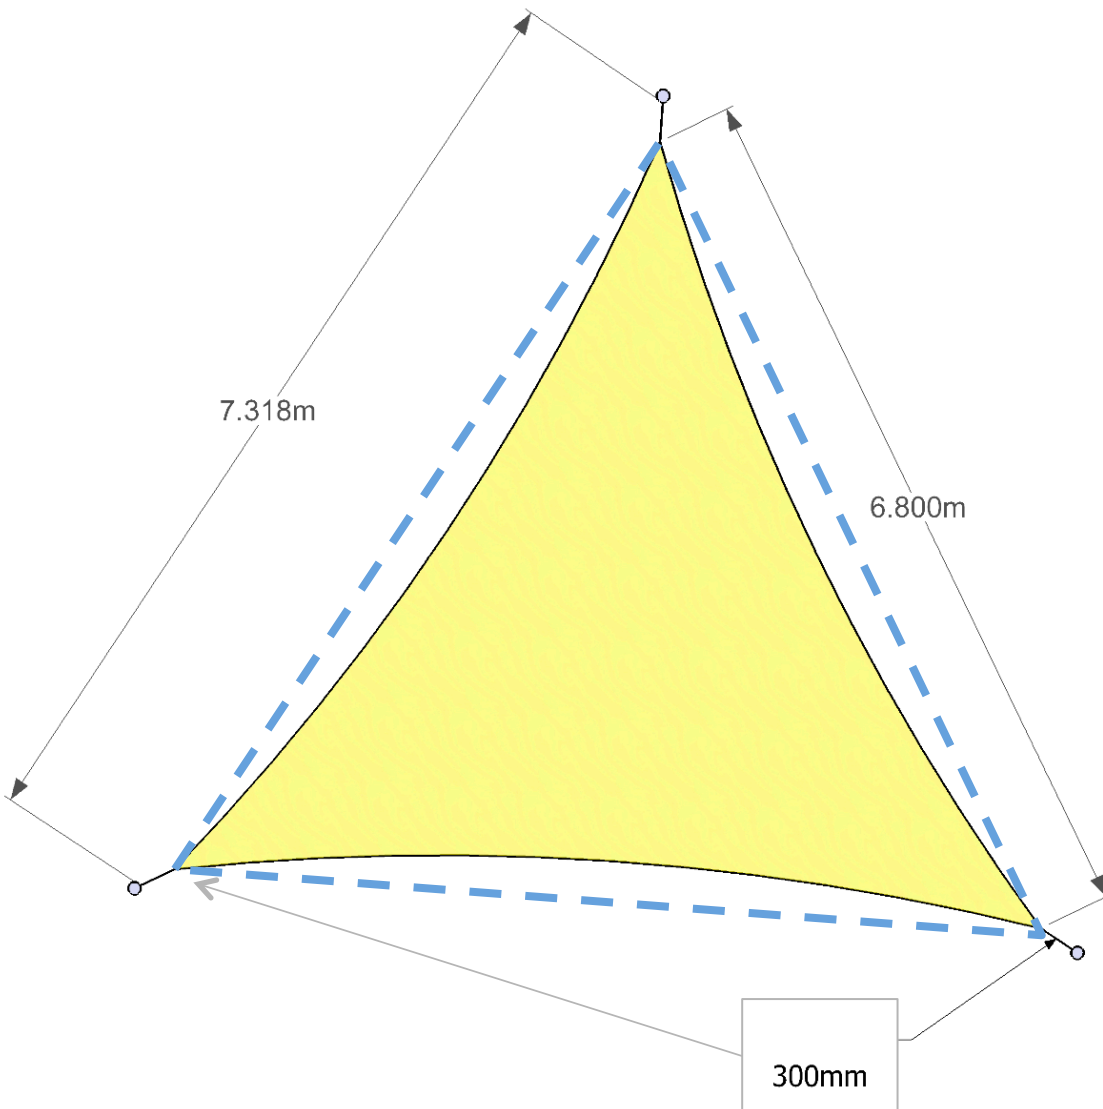

Denotes outside perimeter measurement of sail under tension. Points of attachment must be a minimum of 300mm outside the line of sail to allow for tensioning. Points of attachment must be in a direct straight line of pull otherwise sail will not tension up evenly. This diagram is a guide only. Please contact our office for additional information.